

## How to Pump Out Your Boat

1. Remove the cap from the boat's deck waste fitting.
2. Insert pumpout hose nozzle into deck fitting.
3. Turn pump on. If there is a hose valve, open it to start suction.
4. When no waste is seen in "sight glass", close hose valve and remove nozzle from deck fitting.
5. Put nozzle (with open valve) in bucket of water for 15 seconds to rinse hose  
Rinse boat's tank with water and pump dry, if desired.
6. Close valve and put away hose. Turn off pump and replace deck fitting cap.

